

56 Sparta Avenue • Newton, New Jersey 07860
 (973) 300-3000 Sales • (973) 300-3600 Fax
 www.thorlabs.com



LED851W - August 23, 2019
 Item # LED851W was discontinued on August 23, 2019. For informational purposes, this is a copy of the website content at that time and is valid only for the stated product.

UNMOUNTED LEDs

- ▶ LEDs in the UV, Visible, or IR Spectral Ranges
- ▶ Broadband Light Sources
- ▶ Versatile LED Mounts



TO-18 LED Shown in LEDMF Mount (Post Not Included)



Application Idea



LED630E Red LED Mounted in an LEDMT1F Using an LMR05 Lens Mount

OVERVIEW

Features

- Unmounted LEDs in TO-Can Packages
- Wide Range of Center Wavelengths Available (See Table to the Right)
 - Single-Color LEDs from 245 nm to 4.5 μm
 - Multi-Color LEDs
 - White Light LEDs (430 - 660 nm)
- LED Output Powers Ranging from 6 μW to 170 mW
- Select LEDs Sold in Packs of 5
- Mounting Options (Post Mountable or SM Threaded) and LED Socket Available
- Other LED Configurations Include Mounted LEDs, Fiber-Coupled LEDs, and Collimated LEDs (See *LED Selection Guide* Tab for Full List of Options)

Light-emitting diodes (LEDs) are compact, energy-efficient light sources that can emit light over a wide range of wavelengths. Thorlabs offers unmounted LEDs for center wavelengths from 245 nm to 4.5 μm . These unmounted LEDs are packaged in a variety of TO-can style housings, including T-1 3/4, TO-18, TO-39, and TO-18R. Our UV LEDs are available with either an integrated window or ball lens, while all other LEDs are offered epoxy encased or with a glass lens, flat window, or a parabolic reflector. Post-mountable and SM-threaded passive mounts, as well as a socket for LEDs, are sold separately below.

Use the Quick Links table to the right to view LEDs within a specific wavelength range. General information about each LED is provided in the tables to compare specifications. Complete specifications and a spectrum plot are provided in the spec sheets, which can be accessed by clicking on the red docs icon (📄) next to the Item # below.

Due to unmounted LEDs typically having significant divergence angles, the output light frequently needs to be focused through a lens for use within an experimental setup. Aspheric condenser lenses (available uncoated for 380 - 2100 nm or with an AR coating for 350 - 700 nm or 650 - 1050 nm) are ideal for collimating the light from our unmounted LEDs with a center wavelength from 405 nm to 1600 nm. Unmounted LEDs with center wavelengths from 1650 nm to 4500 nm feature parabolic reflectors that reduce the output divergence angle. The *Characterization* tab describes sample methods and equipment for characterizing the light output from the majority of LEDs offered on this page. To discuss other options, please contact Tech Support.

If you do not see an LED with the wavelength/color, optical power, or viewing angle desired, please contact Tech Support, and we will work to obtain one for you and consider adding it to our permanent offerings.

Quick Links

UV with Ball Lens (250 - 280 nm)
UV (245 - 385 nm)
Visible (395 - 680 nm)
IR (750 - 1600 nm)
MIR (1650 - 4500 nm)
Multi Color
White Light (430 - 660 nm)
USB-Powered LED Mounts
LED Mounts
LED Socket

CHARACTERIZATION


Light-Emitting Diode (LED) Characterization Methods

Thorlabs offers the items and equipment necessary to characterize the light emission properties of the majority of LEDs sold on this page. The different specifications which may be determined using the methods and equipment below are:

- Spectral Distribution
- Full Width at Half Maximum (FWHM)
- Radial Intensity Distribution
- Half Viewing Angle
- Forward Radiated Optical Power
- Total Optical Power

Measurement Technique for Spectral Distribution and FWHM

A CCS200(M) Fiber-Coupled Compact Spectrometer connected to a computer is used to measure the spectral response of each LED in the UV*/visible wavelength range (200 - 1000 nm; for LEDs emitting in NIR, use the OSA202C). The LED may be powered by an LD1255R Laser Diode Driver operating in constant current mode. The light from the LED is focused by an LB1761 Bi-Convex Lens, $f = 25.4$ mm, into a $\text{\O}50$ μm core multimode fiber patch cable with SMA905 connectors attached to the spectrometer.

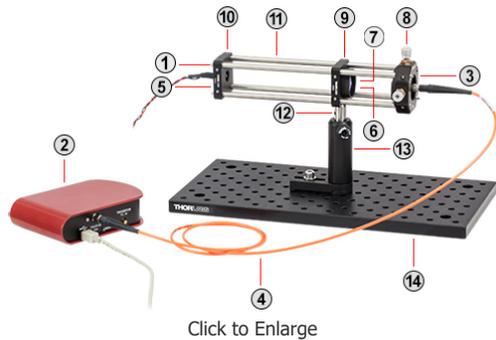

#	Imperial Item #	Metric Item #	Product Description	Qty.
Visible LEDs (245 nm - 940 nm)				
1	-	-	LED (245 nm - 940 nm) ^a	1
2	CCS200	CCS200/M	Compact Spectrometer, Extended Range: 200 - 1000 nm	1
3	SM1SMA	-	SMA Fiber Adapter Plate	1
4	M14L01	-	$\text{\O}50$ μm , SMA905 Fiber Patch Cable	1
NIR LEDs (635 nm - 1650 nm)				
1	-	-	LED (635 nm - 1650 nm) ^a	1
2 ^b	OSA202C	-	Optical Spectrum Analyzer, Wavelength Range: 600 - 1700 nm	1
3	SM1FC	-	FC/PC Fiber Adapter Plate	1
4	M42L01	-	$\text{\O}50$ μm , FC/PC Fiber Patch Cable	1
General				
5	S05LEDM	-	SM05 LED Mount	1
6	LB1676	-	N-BK7 Bi-Convex Lens, $\text{\O}1$ ", $f = 100.0$ mm	1
7	SM1L03	-	SM1 Lens Tube, 0.3" Thread Depth	1
8	CXY1	-	XY Translating Lens Mount for $\text{\O}1$ " Optics	1
9	CP02	CP02/M	SM1-Threaded 30 mm Cage Plate	1
10	CP11	CP11/M	SM05-Threaded 30 mm Cage Plate	1
11	ER8-P4	-	Cage Assembly Rods, 8" Long, $\text{\O}6$ mm, 4 Pack	1
12	TR2	TR50/M	$\text{\O}1/2$ " x 2" (50 mm) Stainless Steel Optical Post	1
13	UPH3	UPH75/M	Universal Post Holder, 3" (75 mm)	1
14	MB612	MB1530/M	Aluminum Breadboard, 6" x 12" (150 mm x 300 mm)	1
15	HW-KIT2	HW-KIT2/M	1/4"-20 (M6) Cap Screw and Hardware Kit	1


- The wire connected to the LED is for illustrative purposes only, and electrical connections must be made by the user. LEDs also require a separate power supply or driver. Thorlabs offers compatible LD1255R and DC2200 Drivers.
- Please note that the CCS200 is shown in the photo to the left.

*Please note that the CCS200 spectrometer cannot be amplitude calibrated below 380 nm. When performing broadband power measurements, a large difference in the relative response of the system from the UV to the visible inhibits reliable power readings in the UV.

Measurement Technique for Radial Intensity Distribution and the Half Viewing Angle

To make a measurement of the intensity pattern as a function of angle, the LED is rotated on an axis perpendicular to the axis along which the emitted light intensity was the greatest. Goniometric rotation of the LED is achieved by mounting the LED on a post attached to a Motorized Rotation Stage so that the rotation axis goes through the light emitting surface of the LED. The stage is controlled by a brushed DC servo motor, such as our KDC101, while the LED is powered by an LD1255R Laser Diode Driver. The radiated light is detected using either a Si or Ge Photodetector, DET36A2 or DET30B2 respectively, located approximately 12 inches from the LED. The S05LEDM LED Mount is recessed within the SM05M10 Lens Tube such that the front of the LED is centered above the center of the rotation stage. To keep stray or scattered light from hitting the detector, SM1 Lens Tubes are attached to the detector that extends to just short of the LED. Two SM1D12C Iris Apertures are placed along the path from the LED to the detector. The iris closer to the LED has an aperture diameter of 10 mm while the aperture nearest the detector has a diameter of 3 mm.

As the LED rotates, the output of the photodiode detector, which is proportional to the light intensity, is recorded for each angular position using a data acquisition card. The LED is rotated from +90° to -90°, where 0° approximately corresponds to when the axis of maximum intensity is parallel to the detector axis. The half viewing angle specification is determined by the angle that corresponds to a 50% drop from the maximum detector output.

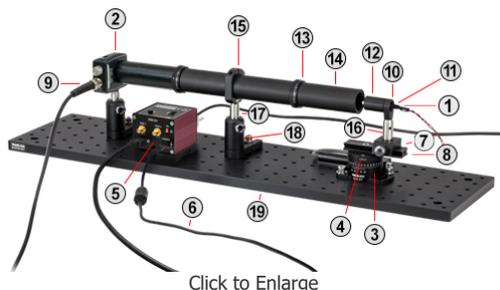


#	Imperial Item #	Metric Item #	Product Description	Qty.
Visible LEDs (365 nm - 1070 nm)				
1	-	-	LED (365 nm - 1070 nm) ^a	1
2	DET36A2	-	Silicon Photodetector Wavelength Range: 350 - 1100 nm	1
NIR LEDs (850 nm - 1750 nm)				
1	-	-	LED (850 nm - 1750 nm) ^a	1
2	DET30B2	-	Germanium Photodetector Wavelength Range: 800 - 1800 nm	1
General				
3	-	-	Motorized Rotation Stage	1
4	CR1A	CR1A/M	CR1 Adapter Plate	1
5	KDC101	-	K-Cube™ DC Servo Motor Controller	1
6	KPS101	-	15 Volt Power Supply for T-Cube™	1
7	RC1	-	Rail Carrier, 1" x 1"	1
8	RLA0300	RLA075/M	Dovetail Optical Rail, 3" (75 mm)	1
9	2249-C-36	-	BNC Coaxial Cable, BNC Male to BNC Male	1
10	LMR05S	LMR05S/M	Ø1/2" Lens Mount with Internal and External SM05 Threads	1
11	S05LEDM	-	SM05 LED Mount	1
12	SM05M10	-	SM05 Lens Tube without External Threads, 1" Long	1
13	SM1D12C	-	Graduated, Ring-Activated SM1 Iris Diaphragm	2
14	SM1L30	-	SM1 Lens Tube, 3" Thread Depth	4
15	SM1RC	SM1RC/M	SM1 Series Slim Lens Tube Slip Ring	1
16	TR1	TR30/M	Ø1/2" x 1" (30 mm) Stainless Steel Optical Post	1

#	Imperial Item #	Metric Item #	Product Description	Qty.
17	TR2	TR50/M	Ø1/2" x 2" (50 mm) Stainless Steel Optical Post	2
18	UPH2	UPH50/M	Universal Post Holder, 2" (50 mm)	2
19	MB624	MB1560/M	Aluminum Breadboard, 6" x 24" (150 mm x 600 mm)	1
20	HW-KIT2	HW-KIT2/M	1/4"-20 (M6) Cap Screw and Hardware Kit	1

- The wire connected to the LED is for illustrative purposes only, and electrical connections must be made by the user. LEDs also require a separate power supply or driver. Thorlabs offers compatible LD1255R and DC2200 Drivers.

Measurement Technique for Determining the Forward Radiated Optical Power

The total forward radiated power of the LED is measured using a PM400 Power and Energy Meter with an S120VC Power Sensor (for UV/visible wavelength LEDs) or S122C Power Sensor (for NIR LEDs). See the picture below.

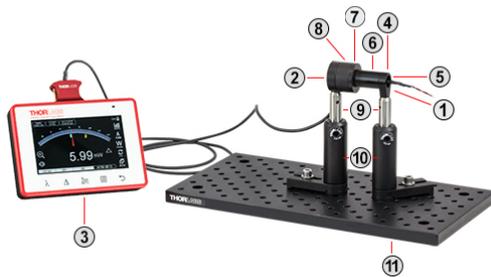


Click to Enlarge

#	Imperial Item #	Metric Item #	Product Description	Qty.
Visible LEDs (245 nm - 1070 nm)				
1	-	-	LED (245 nm - 1070 nm) ^a	1
2	S120VC	-	Photodiode Power Sensor, Si Wavelength Range: 200 - 1100 nm	1
NIR LEDs (780 nm - 1750 nm)				
1	-	-	LED (780 nm - 1750 nm) ^a	1
2	S122C	-	Photodiode Power Sensor, Ge Wavelength Range: 700 - 1800 nm	1
General				
3	PM400	-	Touch Screen Power and Energy Meter	1
4	LMR05S	LMR05S/M	Ø1/2" Lens Mount with Internal and External SM05 Threads	1
5	S05LEDM	-	SM05 LED Mount	1
6	SM05M10	-	SM05 Lens Tube without External Threads, 1" Long	1
7	SM1A1	-	Adapter with External SM05 Threads and Internal SM1 Threads	1
8	SM1L05	-	SM1 Lens Tube, 0.5" Thread Depth	1
9	TR2	TR50/M	Ø1/2" x 2" (50 mm) Stainless Steel Optical Post	2
10	UPH3	UPH75/M	Universal Post Holder, 3" (75 mm)	2
11	MB612	MB1530/M	Aluminum Breadboard, 6" x 12" (150 mm x 300 mm)	1
12	HW-KIT2	HW-KIT2/M	1/4"-20 (M6) Cap Screw and Hardware Kit	1

- The wire connected to the LED is for illustrative purposes only, and electrical connections must be made by the user. LEDs also require a separate power supply or driver. Thorlabs offers compatible LD1255R and DC2200 Drivers.

Measurement Technique for Determining the Total Optical Power

The total optical output power of an LED is measured using an integrating sphere. The radiated light is detected using either a Silicon (for UV or visible wavelength LEDs) or InGaAs (for NIR LEDs) Photodiode and Integrating Sphere, such as the IS200 with SM05PD2A or IS210C, respectively. The sphere may be calibrated with a laser source such as the Thorlabs CPS635R Laser Diode Module. The output of the photodiode can be amplified and measured using our PDA200C Benchtop Photodiode Amplifier.

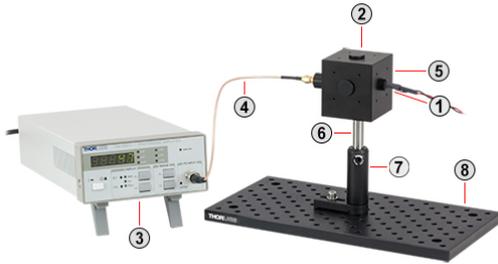

Click to Enlarge

#	Imperial Item #	Metric Item #	Product Description	Qty.
Visible LEDs (245 nm - 1070 nm)				
1	-	-	LED (245 nm - 1070 nm) ^a	1
2	IS200 SM05PD2A	-	Ø2" Integrating Sphere, Si Photodiode, Wavelength: 200 - 1100 nm	1
NIR LEDs (850 nm - 1750 nm)				
1	-	-	LED (850 nm - 1750 nm) ^a	1
2	IS210C	-	Ø2" Integrating Sphere, InGaAs Sensor, Wavelength Range: 800 - 1800 nm	1
General				
3	PDA200C	-	Benchtop Photodiode Amplifier	1
4	CA2806	-	SMA Coaxial Cable, SMA to BNC	1
5	S05LEDM	-	SM05 LED Mount	1
6	TR2	TR50/M	Ø1/2" x 2" (50 mm), Stainless Steel Optical Post	1
7	UPH3	UPH75/M	Universal Post Holder, 3" (75 mm)	1
8	MB612	MB1530/M	Aluminum Breadboard, 6" x 12" (150 mm x 300 mm)	1
9	HW-KIT2	HW-KIT2/M	1/4"-20 (M6) Cap Screw and Hardware Kit	1

- The wire connected to the LED is for illustrative purposes only, and electrical connections must be made by the user. LEDs also require a separate power supply or driver. Thorlabs offers compatible LD1255R and DC2200 Drivers.

Light Emitting Diode (LED) Selection Guide

(Click Representative Photo to Enlarge; Not to Scale)										
Wavelength	Unmounted LEDs	Pigtailed LEDs	LEDs in SMT Packages	PCB-Mounted LEDs	Heatsink-Mounted LEDs	Collimated LEDs for Microscopy (Item # Prefix ^a)	Fiber-Coupled LEDs ^b	High-Power LEDs for Microscopy	4-Wavelength LED Source Options ^c	LED Arrays
Single Color LEDs										
245 nm	LED245W (0.07 mW)	-	-	-	-	-	-	-	-	-
250 nm	LED250J (1 mW Min)	-	-	-	-	-	-	-	-	-
255 nm	LED255J (1 mW Min)	-	-	-	-	-	-	-	-	-
260 nm	LED260W (0.3 mW) LED260J (1 mW Min)	-	-	-	-	-	-	-	-	-
265 nm	-	-	-	M265D2 (10 mW Min)	M265L3 (10 mW Min)	-	-	-	-	-
275 nm	LED275W (0.8 mW) LED275J (1 mW Min)	-	-	M275D2 (45 mW Min)	M275L4 (45 mW Min)	-	-	-	-	-
280 nm	LED280J (1 mW Min)	-	-	-	-	-	-	-	-	-
285 nm	LED285W (0.8 mW)	-	-	M285D3 (50 mW Min)	M285L5 (50 mW Min)	-	M285F4 (420 μW)	-	-	-
290 nm	LED290W (0.8 mW)	-	-	-	-	-	-	-	-	-
300 nm	LED300W (0.5 mW)	-	-	M300D3 (26 mW Min)	M300L4 (26 mW Min)	-	M300F2 (320 μW)	-	-	-
315 nm	LED315W (0.6 mW)	-	-	-	-	-	-	-	-	-
340 nm	LED341W (0.33 mW)	-	-	M340D3 (53 mW Min)	M340L4 (53 mW Min)	-	M340F3 (1.06 mW)	-	-	-
365 nm	-	-	-	M365D1 (190 mW Min)	M365L2 (190 mW Min)	M365L2 (60 mW) ^d	M365F1 (4.1 mW)	SOLIS-365C (3.0 W) ^e	Available (85 mW)	LIU365A (31 mW)
				M365D2 (1150 mW Min)	M365LP1 (11-50 mW Min)	M365LP1 (350 mW) ^d	M365FP1 (15.5 mW)			
375 nm	LED375L (1 mW)	-	-	M375D4 (1270 mW Min)	M375L4 (1270 mW Min)	-	M375F2 (4.23 mW)	-	-	-
	LED370E (2.5 mW)									
385 nm	LED385L (5 mW)	-	-	M385D1 (270 mW Min)	M385L2 (270 mW Min)	M385L2 (90 mW) ^d	M385F1 (10.7 mW)	SOLIS-385C (5.8 W) ^e	Available (95 mW)	-
				M385D2 (1650 mW Min)	M385LP1 (1650 mW Min)	M385LP1 (520 mW) ^d	M385FP1 (23.2 mW)			
395 nm	LED395L (6 mW)	-	-	M395D3 (400 mW Min)	M395L4 (400 mW Min)	-	M395F3 (6.8 mW)	-	-	-

Light Emitting Diode (LED) Selection Guide

Wavelength	Unmounted LEDs	Pigtailed LEDs	LEDs in SMT Packages	PCB-Mounted LEDs	Heatsink-Mounted LEDs	Collimated LEDs for Microscopy (Item # Prefix ^a)	Fiber-Coupled LEDs ^b	High-Power LEDs for Microscopy	4-Wavelength LED Source Options ^c	LED Arrays
Single Color LEDs										
405 nm	LED405L (6 mW)	-	-	M405D2 (1500 mW Min)	M405L4 (1000 mW Min)	M405L3 (440 mW) ^d M405L4 (510 mW) ^f	M405F1 (3.7 mW)	SOLIS-405C (3.9 W) ^e	Available (290 mW)	-
	LED405E (10 mW)				M405LP1 (1200 mW Min)	M405LP1 (450 mW) ^d	M405FP1 (24.3 mW)			
415 nm	-	-	-	M415D2 (1640 mW Min)	M415L4 (1310 mW Min)	-	M415F3 (21.3 mW)	SOLIS-415C (5.8 W) ^e	-	-
					M415LP1 (1640 mW Min)					
420 nm	-	-	-	-	-	-	-	-	Available (95 mW)	-
430 nm	LED430L (8 mW)	-	-	M430D2 (490 mW Min)	M430L4 (490 mW Min)	-	-	-	-	-
445 nm	-	-	-	-	-	-	-	SOLIS-445C (5.4 W) ^e	-	-
450 nm	LED450L (7 mW)	-	LEDS450 (250 mW)	M450D3 (1850 mW Min)	M450LP1 (1850 mW Min)	-	-	-	-	-
455 nm	-	-	-	M455D2 (900 mW Min)	M455L3 (900 mW Min)	M455L3 (360 mW) ^d	M455F1 (11.0 mW)	-	Available (310 mW)	-
				M455D3 (1150 mW Min)	M455L4 (1150 mW Min)	M455L4 (490 mW) ^d	M455F3 (24.5 mW)			
465 nm	LED465E (20 mW)	-	-	-	-	-	-	-	-	-
470 nm	LED470L (170 mW)	EP470S04 (18 mW Min)	-	M470D2 (650 mW Min)	M470L4 (760 mW Min)	M470L4 (330 mW) ^d	M470F3 (17.2 mW)	SOLIS-470C (3.0 W) ^e	Available (250 mW)	LIU470A (253 mW)
		EP470S10 (100 mW Min)		M470D3 (760 mW Min)						
490 nm	LED490L (3 mW)	-	-	M490D3 (205 mW Min)	M490L4 (205 mW Min)	-	M490F3 (2.3 mW)	-	Available (50 mW)	-
505 nm	LED505L (4 mW)	-	-	M505D2 (400 mW Min)	M505L3 (400 mW Min)	M505L3 (150 mW) ^d	M505F3 (11.7 mW)	SOLIS-505C (1.0 W) ^e	Available (170 mW)	-
				M505D3 (400 mW Min)	M505L4 (400 mW Min)	M505L4 (170 mW) ^d				
525 nm	LED525E (2.6 mW Max)	-	-	-	-	-	-	SOLIS-525C (2.4 W) ^e	-	LIU525A (111 mW)
	LED525L (4 mW)									
	LED528EHP (7 mW)									
530 nm	-	-	-	M530D2 (350 mW Min)	M530L3 (350 mW Min)	M530L3 (130 mW) ^d	M530F2 (6.8 mW)	-	Available (100 mW)	-
				M530D3 (370 mW Min)	M530L4 (370 mW Min)	M530L4 (160 mW) ^d				
554 nm	-	-	-	MINTD3 (650 mW Min)	MINTL5 (650 mW Min)	-	MINTF4 (21 mW Min)	-	-	-
555 nm	LED555L (1 mW)	-	-	-	-	-	-	-	-	-

Light Emitting Diode (LED) Selection Guide										
Wavelength	Unmounted LEDs	Pigtailed LEDs	LEDs in SMT Packages	PCB-Mounted LEDs	Heatsink-Mounted LEDs	Collimated LEDs for Microscopy (Item # Prefix ^a)	Fiber-Coupled LEDs ^b	High-Power LEDs for Microscopy	4-Wavelength LED Source Options ^c	LED Arrays
565 nm	-	-	-	M565D2 (880 mW Min)	M565L3 (880 mW Min)	-	M565F3 (13.5 mW)	SOLIS-4C (3.2 mW) ^e	Available (106 mW)	-
570 nm	LED570L (0.35 mW)	-	-	-	-	-	-	-	-	-
590 nm	LED590L (2 mW)	EP590S04 (3.5 mW Min)	-	M590D2 (160 mW Min)	M590L3 (160 mW Min)	M590L3 (60 mW) ^d	M590F2 (2.73 mW)	SOLIS-590C (350 mW) ^e	Available (65 mW)	LIU590A (109 mW)
	LED591E (2 mW)	EP590S10 (18 mW Min)		M590D3 (230 mW Min)	M590L4 (230 mW Min)	M590L4 (100 mW) ^d	M590F3 (4.6 mW)			
595 nm	-	-	-	M595D2 (445 mW Min)	M595L3 (445 mW Min)	-	M595F2 (8.7 mW)	SOLIS-595C (700 mW) ^e	-	-
Single Color LEDs										
600 nm	LED600L (3 mW)	-	-	-	-	-	-	-	-	-
610 nm	LED610L (8 mW)	-	-	-	-	-	-	-	-	-
617 nm	-	-	-	M617D2 (600 mW Min)	M617L3 (600 mW Min)	M617L3 (230 mW) ^d	M617F2 (10.2 mW)	SOLIS-617C (1.5 mW) ^e	Available (210 mW)	-
				M617D3 (660 mW Min)	M617L4 (660 mW Min)	M617L4 (280 mW) ^d				
623 nm	-	-	-	-	-	-	-	SOLIS-623C (3.8 W) ^e	-	-
625 nm	LED625L (12 mW)	-	-	M625D3 (700 mW Min)	M625L4 (700 mW Min)	M625L3 (270 mW) ^d	M625F1 (13.2 mW)	-	Available (240 mW)	-
						M625L4 (490 mW) ^d				
630 nm	LED630L (16 mW)	-	-	-	-	-	-	-	-	LIU630A (208 mW)
635 nm	LED631E (4 mW)	-	-	-	-	-	-	-	-	-
	LED635L (170 mW)									
639 nm	LED630E (7.2 mW)	-	-	-	-	-	-	-	-	-
645 nm	LED645L (16 mW)	-	-	-	-	-	-	-	-	-
660 nm	LED660L (13 mW)	-	-	M660D2 (940 mW Min)	M660L4 (940 mW Min)	M660L4 (400 mW) ^d	M660F1 (14.5 mW)	SOLIS-660C (2.0 W) ^e	Available (210 mW)	-
670 nm	LED670L (12 mW)	-	-	-	-	-	-	-	-	-
680 nm	LED680L (8 mW)	-	-	M680D2 (180 mW Min)	M680L4 (180 mW Min)	-	M680F3 (2.7 mW)	-	-	-
700 nm	-	EP700S04 (5 mW Min)	-	M700D2 (80 mW Min)	M700L4 (80 mW Min)	-	M700F3 (1.7 mW)	-	-	-
		EP700S10 (30 mW Min)								
730 nm	-	-	-	M730D3 (540 mW Min)	M730L5 (540 mW Min)	M730L4 (165 mW) ^d	-	-	-	-
740 nm	-	-	-	-	-	-	M740F2 (6.0 mW)	SOLIS-740C (2.0 W) ^e	-	-
750 nm	LED750L (18 mW)	-	-	-	-	-	-	-	-	-

Light Emitting Diode (LED) Selection Guide										
Wavelength	Unmounted LEDs	Pigtailed LEDs	LEDs in SMT Packages	PCB-Mounted LEDs	Heatsink-Mounted LEDs	Collimated LEDs for Microscopy (Item # Prefix ^a)	Fiber-Coupled LEDs ^b	High-Power LEDs for Microscopy	4-Wavelength LED Source Options ^c	LED Arrays
760 nm	LED760L (24 mW)	-	-	-	-	-	-	-	-	-
770 nm	LED770L (22 mW)	-	-	-	-	-	-	-	-	-
780 nm	LED780E (18 mW)	-	-	M780D2 (200 mW Min)	M780L3 (200 mW Min)	M780L3 (130 mW) ^d	M780F2(7.5 mW)	-	-	LIU780A (315 mW)
	LED780L (22 mW)			M780D3 (800 mW Min)	M780LP1 (800 mW Min)					
800 nm	LED800L (20 mW)	-	-	-	-	-	-	-	-	-
810 nm	LED810L (22 mW)	EP810S04 (16 mW Min)	-	M810D2 (325 mW Min)	M810L3 (325 mW Min)	M810L3 (210 mW) ^d	M810F2 (6.5 mW)	-	-	-
		EP810S10 (90 mW Min)								
830 nm	LED830L (22 mW)	-	-	-	-	-	-	-	-	-
840 nm	LED840L (22 mW)	-	-	-	-	-	-	-	-	-
850 nm	LED851W (8 mW)	-	-	M850D2 (900 mW Min)	M850L3 (900 mW Min)	M850L3 (330 mW) ^d	M850F2 (13.4 mW)	SOLIS-850C (2.7 W) ^e	-	LIU850A (322 mW)
	LED851L (13 mW)			M850D3 (1400 mW)	M850LP1 (1400 mW Min)					
870 nm	LED870E (22 mW)	-	-	-	-	-	-	-	-	-
	LED870L (24 mW)									
880 nm	-	-	-	M880D2 (300 mW Min)	M880L3 (300 mW Min)	-	M880F2 (3.4 mW)	-	-	-
890 nm	LED890L (12 mW)	-	-	-	-	-	-	-	-	-
910 nm	LED910L (10 mW)	-	-	-	-	-	-	-	-	-
	LED910E (12 mW)									
930 nm	LED930L (15 mW)	-	-	-	-	-	-	-	-	-
940 nm	LED940E (18 mW)	-	-	M940D2 (800 mW Min)	M940L3 (800 mW Min)	M940L3 (320 mW) ^d	M940F3 (14.2 mW)	SOLIS-940C (2.5 W) ^e	-	-
970 nm	LED970L (5 mW)	-	-	M970D3 (600 mW Min)	M970L4 (600 mW Min)	-	M970F3 (8.1 mW)	-	-	-
Single Color LEDs										
1050 nm	LED1050E (2.5 mW)	-	-	M1050D1 (50 mW Min)	M1050L2 (50 mW Min)	-	M1050F1 (1.4 mW)	-	-	-
	LED1050L (4 mW)			M1050D3 (160 mW Min)	M1050L4 (160 mW Min)		M1050F3 (3 mW)			
1070 nm	LED1070L (4 mW)	-	-	-	-	-	-	-	-	-
	LED1070E (7.5 mW)									
1085 nm	LED1085L (5 mW)	-	-	-	-	-	-	-	-	-
1200 nm	LED1200E (2.5 mW)	-	-	M1200D2 (30 mW Min)	M1200L3 (30 mW Min)	-	-	-	-	-

				Light Emitting Diode (LED) Selection						
Wavelength	Unmounted LEDs	Pigtailed LEDs	LEDs in SMT Packages	PCB-Mounted LEDs	Heatsink-Mounted LEDs	Collimated LEDs for Microscopy (Item # Prefix ^a)	Fiber-Coupled LEDs ^b	High-Power LEDs for Microscopy	4-Wavelength LED Source Options ^c	LED Arrays
	LED1200L (5 mW)									
1300 nm	LED1300E (2 mW)	-	-	M1300D2 (25 mW Min)	M1300L3 (25 mW Min)	-	-	-	-	-
	LED1300L (3.5 mW)									
1450 nm	LED1450E (2 mW)	-	-	M1450D2 (31 mW Min)	M1450L3 (31 mW Min)	-	-	-	-	-
	LED1450L (5 mW)									
1550 nm	LED1550E (2 mW)	-	-	M1550D2 (31 mW Min)	M1550L3 (31 mW Min)	-	-	-	-	-
	LED1550L (4 mW)									
1600 nm	LED1600L (2 mW)	-	-	-	-	-	-	-	-	-
1650 nm	LED1600P (1.2 mW)	-	-	M1650D2 (13 mW)	M1650L4 (13 mW)	-	-	-	-	-
1750 nm	LED1700P (1.2 mW Quasi-CW, 30 mW Pulsed)	-	-	-	-	-	-	-	-	-
1850 nm	LED1800P (0.9 mW Quasi-CW, 20 mW Pulsed)	-	-	-	-	-	-	-	-	-
1950 nm	LED1900P (1.0 mW Quasi-CW, 25 mW Pulsed)	-	-	-	-	-	-	-	-	-
2050 nm	LED2050P (1.1 mW Quasi-CW, 28 mW Pulsed)	-	-	-	-	-	-	-	-	-
2350 nm	LED2350P (0.8 mW Quasi-CW, 16 mW Pulsed)	-	-	-	-	-	-	-	-	-
4200 nm	LED4300P (0.01 mW Quasi-CW, 0.2 mW Pulsed)	-	-	-	-	-	-	-	-	-
4500 nm	LED4600P (0.006 mW Quasi-CW, 0.12 mW Pulsed)	-	-	-	-	-	-	-	-	-

Multi-Color, Broadband, and White LEDs

Light Emitting Diode (LED) Selection Guide

455 nm (12.5% ⁹) and 640 nm	-	-	-	MPRP1D2 (275 mW Min)	MPRP1L4 (275 mW Min)	-	-	-	-	-
572 nm and 625 nm	LEDGR (0.09 mW and 0.19 mW)	-	-	-	-	-	-	-	-	-
588 nm and 617 nm	LEDRY (0.09 mW and 0.19 mW)	-	-	-	-	-	-	-	-	-
467.5 nm, 525 nm, and 627.5 nm	LEDRGBE (5.8 mW, 6.2 mW, and 3.1 mW)	-	-	-	-	-	-	-	-	-
430 - 660 nm (White)	LEDWE-15 (13 mW)	-	-	-	-	-	-	-	-	-
	LEDW7E (15.0 mW)									
	LEDW25E (15.0 mW)									
470 - 850 nm (Broadband)	-	-	-	MBB1D1 (70 mW Min)	MBB1L3 (70 mW Min)	-	MBB1F1 (1.2 mW)	-	-	-
6500 K (Cold White)	-	-	-	MCWHD2 (800 mW Min)	MCWHL5 (800 mW Min)	MCWHL5 (320 mW) ^d	-	SOLIS-1C (3.3 W) ^e	-	-
				MCWHD3 (2350 mW Min)	MCWHL1P1 (2350 mW Min)					
6200 K (Cold White)	-	-	-	-	-	-	MCWHF2 (21.5 mW)	-	-	-
5000 K (Cold White)	-	-	LEDSW50 (110 mW)	-	-	-	-	-	-	-
4600 - 9000 K (Cold White)	-	-	-	-	-	-	-	-	-	LIUCWHA (250 mW)
4000 K (Warm White)	-	-	LEDSW40 (115 mW)	-	-	-	MWWHF2 (16.3 mW)	-	-	-
3000 K (Warm White)	-	-	LEDSW30 (100 mW)	MWWHD3 (2000 mW Min)	MWWHL4 (570 mW Min)	-	-	SOLIS-2C (3.2 W) ^e	-	-
					MWWHLP1 (2000 mW Min)					
5700 K (Day Light White)	-	-	-	-	-	-	-	SOLIS-3C (3.5 W)	-	-

- These Collimated LEDs are compatible with the standard and epi-illumination ports on the following microscopes: Olympus BX/IX (Item # Suffix: -C1), Leica DMI (Item # Suffix: -C2), Zeiss Axioskop (Item # Suffix: -C4), and Nikon Eclipse (Bayonet Mount, Item # Suffix: -C5).
 Typical power when used with MM Fiber with Ø400 µm core, 0.39 NA.
- Our LED4D 4-Wavelength LED Source is available with select combinations of the LEDs at these wavelengths.
- Typical power for LEDs with the Leica DMI collimation package (Item # Suffix: -C2).
- Minimum power for the collimated output of these LEDs. The collimation lens is installed with each LED.
- Typical power for LEDs with the Olympus BX and IX collimation package (Item # Suffix: -C1).
- Percentage of LED intensity that emits in the blue portion of the spectrum, from 400 nm to 525 nm.

UV LEDs with Ball Lens (250 - 280 nm)

Item #	Info	Center Wavelength ^a	Optical Power (Min) ^b	Spectral FWHM ^a	Viewing Half Angle ^a	Max DC Forward Current ^c	Lifetime (Min) ^{c,d}	Package ^e
LED250J		250 nm	1 mW	12 nm	7.5°	100 mA	>1000 hrs	TO-39
LED255J		255 nm	1 mW	12 nm	7.5°	100 mA	>1000 hrs	TO-39
LED260J		260 nm	1 mW	12 nm	7.5°	100 mA	>1000 hrs	TO-39
LED275J		275 nm	1 mW	12 nm	7.5°	100 mA	>1000 hrs	TO-39
LED280J		280 nm	1 mW	12 nm	7.5°	100 mA	>1000 hrs	TO-39

- Typical values unless otherwise noted.
- At 100 mA unless otherwise noted.
- Temperature: 25 °C
- The Lifetime is defined as the time required for the LED light output to drop by 50% when driven at 100 mA.
- Because these LEDs can generate up to 1 W of heat, we recommend that they are mounted in an S1LEDM LED mount with a passive HSLT2 heat sink lens tube.

Part Number	Description	Price	Availability
LED250J	250 nm LED with Ball Lens, 1 mW (Min), TO-39	\$631.41	Today
LED255J	255 nm LED with Ball Lens, 1 mW (Min), TO-39	\$594.64	Today
LED260J	260 nm LED with Ball Lens, 1 mW (Min), TO-39	\$591.49	Today
LED275J	275 nm LED with Ball Lens, 1 mW (Min), TO-39	\$448.61	Today
LED280J	280 nm LED with Ball Lens, 1 mW (Min), TO-39	\$410.78	Today

Single-Color UV LEDs (245 - 385 nm)

Item #	Center Wavelength ^a	Optical Power ^{a,b}	Spectral FWHM ^a	Viewing Half Angle ^a	Max DC Forward Current ^c	Package
LED245W	245 nm	0.07 mW	12 nm	60°	25 mA	TO-39
LED260W	260 nm	0.300 mW	12 nm	60°	30 mA	TO-39
LED275W	275 nm	0.8 mW	12 nm	60°	30 mA	TO-39
LED285W	285 nm	0.800 mW	12 nm	60°	30 mA	TO-39
LED290W	290 nm	0.8 mW	12 nm	60°	30 mA	TO-39
LED300W	300 nm	0.5 mW	12 nm	60°	30 mA	TO-39
LED315W	315 nm	0.60 mW	10 nm	60°	30 mA	TO-39
LED341W	340 nm	0.33 mW	15 nm	60°	20 mA	TO-39
LED375L	375 nm	1 mW	10 nm	20°	30 mA	TO-18
LED370E	375 nm	2.5 mW	10 nm	19°	30 mA	T-1 3/4
LED385L	385 nm	5 mW	12 nm	16°	30 mA	TO-18

- Typical values unless otherwise noted.
- At 20 mA unless otherwise noted.
- Specified for temperature of 25 °C.

Part Number	Description	Price	Availability
LED245W	245 nm LED with Window, 0.07 mW, TO-39	\$475.92	Today
LED260W	260 nm LED with Window, 0.3 mW, TO-39	\$333.04	Today
LED275W	275 nm LED with Window, 0.8 mW, TO-39	\$292.07	Today
LED285W	285 nm LED with Window, 0.8 mW, TO-39	\$212.22	Today
LED290W	290 nm LED with Window, 0.8 mW, TO-39	\$242.69	Today
LED300W	300 nm LED with Window, 0.5 mW, TO-39	\$227.98	Today
LED315W	315 nm LED with Window, 0.60 mW, TO-39	\$167.05	Today
LED341W	340 nm LED with Window, 0.33 mW, TO-39	\$188.06	Today
LED375L	Customer Inspired! 375 nm LED with a Glass Lens, 1 mW, TO-18	\$13.24	Today
LED370E	375 nm Epoxy-Encased LED, 2.5 mW, T-1 3/4	\$11.88	Today
LED385L	Customer Inspired! 385 nm LED with a Glass Lens, 5 mW, TO-18	\$13.45	Today

Single-Color Visible LEDs (395 - 680 nm)

Item #	Center Wavelength ^a	Optical Power ^a	Spectral FWHM ^a	Viewing Half Angle ^a	Max DC Forward Current ^b	Package
LED395L	395 nm	6 mW (at 20 mA)	15 nm	16°	30 mA	TO-18
LED405L	405 nm	6 mW (at 20 mA)	20 nm	17°	30 mA	TO-18
LED405E	405 nm	10 mW (at 20 mA)	15 nm	5°	30 mA	T-1 3/4
LED430L	430 nm	8 mW (at 20 mA)	20 nm	22°	50 mA	TO-18
LED450L	450 nm	7 mW (at 20 mA)	20 nm	20°	50 mA	TO-18
LED450LW	450 nm	90 mW (at 100 mA)	16 nm	50°	150 mA	TO-39
LED465E	465 nm	20.0 mW (at 20 mA)	25 nm	8°	50 mA	T-1 3/4
LED470L	470 nm	170 mW (at 350 mA)	22 nm	7°	350 mA	TO-39
LED490L	490 nm	3 mW (at 20 mA)	20 nm	20°	50 mA	TO-18
LED505L	505 nm	4 mW	30 nm	20°	30 mA	TO-18
LED525E	525 nm	2.6 mW (at 20 mA)	32 nm	7.5°	30 mA	T-1 3/4
LED525L	525 nm	4 mW	25 nm	20°	30 mA	TO-18
LED528EHP	525 nm	7.0 mW (at 20 mA)	35 nm	9°	50 mA	T-1 3/4
LED555L	555 nm	1 mW	40 nm	20°	30 mA	TO-18
LED570L	570 nm	0.35 mW	15 nm	20°	30 mA	TO-18
LED590L	590 nm	2 mW	15 nm	20°	30 mA	TO-18
LED591E	590 nm	2 mW (at 20 mA)	20 nm	10°	50 mA	T-1 3/4
LED595LW	595 nm	45 mW (at 100 mA)	75 nm	50°	150 mA	TO-39
LED600L	600 nm	3 mW (at 50 mA)	12 nm	15°	75 mA	TO-18
LED610L	610 nm	8 mW (at 50 mA)	12 nm	25°	75 mA	TO-18
LED625L	625 nm	12 mW (at 50 mA)	14 nm	24°	75 mA	TO-18
LED630L	630 nm	16 mW (at 50 mA)	14 nm	22°	75 mA	TO-18
LED631E	635 nm	4 mW (at 20 mA)	10 nm	20°	50 mA	T-1 3/4
LED635L	635 nm	170 mW (at 350 mA)	15 nm	7°	500 mA	TO-39
LED630E	639 nm	7.2 mW (at 20 mA)	17 nm	7.5°	50 mA	T-1 3/4
LED645L	645 nm	16 mW (at 50 mA)	16 nm	20°	75 mA	TO-18
LED660L	660 nm	13 mW (at 50 mA)	14 nm	18°	75 mA	TO-18
LED670L	670 nm	12 mW (at 50 mA)	22 nm	22°	75 mA	TO-18
LED680L	680 nm	8 mW (at 50 mA)	16 nm	20°	75 mA	TO-18

- Typical values unless otherwise noted.
- Specified for temperature of 25 °C.

Part Number	Description	Price	Availability
LED395L	Customer Inspired! 395 nm LED with a Glass Lens, 6 mW, TO-18	\$13.55	Today
LED405L	Customer Inspired! 405 nm LED with a Glass Lens, 6 mW, TO-18	\$12.18	Today
LED405E	405 nm Epoxy-Encased LED, 10 mW, T-1 3/4	\$18.28	Today
LED430L	Customer Inspired! 430 nm LED with a Glass Lens, 8 mW, TO-18	\$12.08	Today
LED450L	Customer Inspired! 450 nm LED with a Glass Lens, 7 mW, TO-18	\$11.98	Today
LED450LW	450 nm LED with a Flat Window, 90 mW, TO-39	\$28.44	Today
LED465E	465 nm Epoxy-Encased LED, 20 mW, TO-1 3/4, Qty. of 5	\$23.64	Today
LED470L	470 nm LED with a Glass Lens, 170 mW, TO-39	\$59.88	Today
LED490L	Customer Inspired! 490 nm LED with a Glass Lens, 3 mW, TO-18	\$11.88	Today
LED505L	505 nm LED with a Glass Lens, 4 mW, TO-18	\$12.18	Today
LED525E	525 nm Epoxy-Encased LED, 2.6 mW, T-1 3/4, Qty. of 5	\$20.38	Today
LED525L	525 nm LED with a Glass Lens, 4 mW, TO-18	\$12.18	Today
LED528EHP	525 nm Epoxy-Encased LED, 7 mW, T-1 3/4, Qty. of 5	\$23.64	5-8 Days
LED555L	555 nm LED with a Glass Lens, 1 mW, TO-18	\$12.18	Today
LED570L	570 nm LED with a Glass Lens, 0.35 mW, TO-18	\$12.08	Today
LED590L	590 nm LED with a Glass Lens, 2 mW, TO-18	\$12.08	Today

LED591E	590 nm Epoxy-Encased LED, 2 mW, T-1 3/4, Qty. of 5	\$19.33	Today
LED595LW	595 nm LED with a Flat Window, 45 mW, TO-39	\$27.15	Today
LED600L	600 nm LED with a Glass Lens, 3 mW, TO-18	\$12.08	Today
LED610L	610 nm LED with a Glass Lens, 8 mW, TO-18	\$12.08	Today
LED625L	625 nm LED with a Glass Lens, 12 mW, TO-18	\$12.08	Today
LED630L	630 nm LED with a Glass Lens, 16 mW, TO-18	\$12.08	Today
LED631E	635 nm Epoxy-Encased LED, 4 mW, T-1 3/4	\$7.41	Today
LED635L	635 nm LED with a Glass Lens, 170 mW, TO-39	\$59.88	Today
LED630E	630 nm Epoxy-Encased LED, 7.2 mW, T-1 3/4, Qty. of 5	\$14.29	Today
LED645L	645 nm LED with a Glass Lens, 16 mW, TO-18	\$11.98	Today
LED660L	660 nm LED with a Glass Lens, 13 mW, TO-18	\$11.76	Today
LED670L	670 nm LED with a Glass Lens, 12 mW, TO-18	\$11.76	Today
LED680L	680 nm LED with a Glass Lens, 8 mW, TO-18	\$11.76	Today

Single-Color IR LEDs (750 - 1600 nm)

Item #	Center Wavelength ^a	Optical Power ^a	Spectral FWHM ^a	Viewing Half Angle ^a	Max DC Forward Current ^b	Package
LED750L	750 nm	18 mW (at 50 mA)	23 nm	11°	75 mA	TO-18
LED760L	760 nm	24 mW (at 50 mA)	24 nm	12°	75 mA	TO-18
LED770L	770 nm	22 mW (at 50 mA)	28 nm	12°	75 mA	TO-18
LED780E	780 nm	18 mW (at 50 mA)	30 nm	10°	100 mA	T-1 3/4
LED780L	780 nm	22 mW (at 50 mA)	25 nm	12°	75 mA	TO-18
LED800L	800 nm	20 mW (at 50 mA)	30 nm	12°	75 mA	TO-18
LED810L	810 nm	22 mW (at 50 mA)	30 nm	12°	75 mA	TO-18
LED830L	830 nm	22 mW (at 50 mA)	32 nm	12°	75 mA	TO-18
LED840L	840 nm	22 mW (at 50 mA)	35 nm	12°	75 mA	TO-18
LED850LN	850 nm	100 mW (at 500 mA)	55 nm	3.5°	500 mA	TO-39
LED850LW	850 nm	140 mW (at 500 mA)	55 nm	55°	500 mA	TO-39
LED851W	850 nm	8 mW (at 20 mA)	40 nm	55°	100 mA	TO-18
LED851L	850 nm	13 mW (at 20 mA)	40 nm	10°	100 mA	TO-18
LED870E	870 nm	22 mW	40 nm	10°	100 mA	T-1 3/4
LED870L	870 nm	24 mW (at 50 mA)	42 nm	13°	75 mA	TO-18
LED890L	890 nm	12 mW (at 50 mA)	44 nm	14°	75 mA	TO-18
LED910L	910 nm	10 mW (at 50 mA)	44 nm	12°	75 mA	TO-18
LED910E	910 nm	12 mW (at 50 mA)	35 nm	7°	100 mA	5.5 mm
LED930L	930 nm	15 mW (at 50 mA)	60 nm	14°	75 mA	TO-18
LED940E	940 nm	18 mW	50 nm	10°	100 mA	T-1 3/4
LED970L	970 nm	5 mW (at 50 mA)	46 nm	14°	75 mA	TO-18
LED1050E	1050 nm	2.5 mW	55 nm	15°	100 mA	T-1 3/4
LED1050L	1050 nm	4 mW (at 50 mA)	50 nm	15°	100 mA	TO-18
LED1070L	1070 nm	4 mW (at 50 mA)	55 nm	15°	100 mA	TO-18
LED1070E	1070 nm	7.5 mW (at 50 mA)	80 nm	15°	100 mA	T-1 3/4
LED1085L	1085 nm	5 mW (at 50 mA)	50 nm	15°	100 mA	TO-18
LED1200E	1200 nm	2.5 mW (at 20 mA)	100 nm	15°	100 mA	T-1 3/4
LED1200L	1200 nm	5 mW (at 50 mA)	70 nm	15°	100 mA	TO-18
LED1300E	1300 nm	2 mW (at 20 mA)	100 nm	15°	100 mA	T-1 3/4
LED1300L	1300 nm	3.5 mW (at 50 mA)	85 nm	20°	100 mA	TO-18
LED1450E	1450 nm	2 mW (at 20 mA)	100 nm	15°	100 mA	T-1 3/4
LED1450L	1450 nm	5 mW (at 50 mA)	105 nm	14°	100 mA	TO-18
LED1550E	1550 nm	2 mW (at 20 mA)	100 nm	15°	100 mA	T-1 3/4
LED1550L	1550 nm	4 mW (at 50 mA)	120 nm	15°	100 mA	TO-18
LED1600L	1600 nm	2 mW (at 50 mA)	130 nm	15°	100 mA	TO-18

- Typical values unless otherwise noted.
- Specified for temperature of 25 °C.

The LED851W will be retired without replacement when stock is depleted. If you require this part for line production, please contact our OEM Team.

**Limited
STOCK**

Part Number	Description	Price	Availability
LED750L	750 nm LED with a Glass Lens, 18 mW, TO-18	\$9.38	Today
LED760L	760 nm LED with a Glass Lens, 24 mW, TO-18	\$9.38	Today
LED770L	770 nm LED with a Glass Lens, 22 mW, TO-18	\$9.38	Today
LED780E	780 nm Epoxy-Encased LED, 18 mW, T-1 3/4, Qty. of 5	\$28.11	Today
LED780L	780 nm LED with a Glass Lens, 22 mW, TO-18	\$9.38	Today
LED800L	800 nm LED with a Glass Lens, 20 mW, TO-18	\$9.38	Today
LED810L	810 nm LED with a Glass Lens, 22 mW, TO-18	\$9.38	Lead Time
LED830L	830 nm LED with a Glass Lens, 22 mW, TO-18	\$9.38	Today
LED840L	840 nm LED with a Glass Lens, 22 mW, TO-18	\$9.38	Today
LED850LN	850 nm LED with a Glass Lens, 100 mW, TO-39	\$25.07	Today

LED850LW	850 nm LED with a Flat Window, 140 mW, TO-39	\$22.99	Today
LED851W	850 nm LED with a Window, 8 mW, TO-18	\$14.29	Lead Time
LED851L	850 nm LED with a Glass Lens, 13 mW, TO-18	\$14.61	Today
LED870E	870 nm Epoxy-Encased LED, 22 mW, T-1 3/4, Qty. of 5	\$18.28	Today
LED870L	870 nm LED with a Glass Lens, 24 mW, TO-18	\$9.32	Today
LED890L	890 nm LED with a Glass Lens, 12 mW, TO-18	\$8.31	Today
LED910L	910 nm LED with a Glass Lens, 10 mW, TO-18	\$8.31	Today
LED910E	910 nm Epoxy-Encased LED, 12 mW, 5.5 mm	\$8.88	Today
LED930L	930 nm LED with a Glass Lens, 15 mW, TO-18	\$7.32	Today
LED940E	940 nm Epoxy-Encased LED, 18 mW, T-1 3/4, Qty. of 5	\$12.08	Today
LED970L	970 nm LED with a Glass Lens, 5 mW, TO-18	\$7.32	Lead Time
LED1050E	1050 nm Epoxy-Encased LED, 2.5 mW, T-1 3/4	\$18.70	Today
LED1050L	1050 nm LED with a Glass Lens, 4 mW, TO-18	\$25.21	Today
LED1070L	1070 nm LED with a Glass Lens, 4 mW, TO-18	\$25.11	Today
LED1070E	1070 nm Epoxy-Encased LED, 7.5 mW, T-1 3/4	\$22.06	Today
LED1085L	1085 nm LED with a Glass Lens, 5 mW, TO-18	\$25.21	Today
LED1200E	1200 nm Epoxy-Encased LED, 2.5 mW, T-1 3/4	\$19.96	Today
LED1200L	1200 nm LED with a Glass Lens, 5 mW, TO-18	\$25.95	Today
LED1300E	1300 nm Epoxy-Encased LED, 2.0 mW, T-1 3/4	\$19.12	Today
LED1300L	1300 nm LED with a Glass Lens, 3.5 mW, TO-18	\$26.06	Today
LED1450E	1450 nm Epoxy-Encased LED, 2.0 mW, T-1 3/4	\$18.81	Today
LED1450L	1450 nm LED with a Glass Lens, 5 mW, TO-18	\$25.42	Today
LED1550E	1550 nm Epoxy-Encased LED, 2.0 mW, T-1 3/4	\$19.33	Today
LED1550L	1550 nm LED with a Glass Lens, 4 mW, TO-18	\$24.48	Today
LED1600L	1600 nm LED with a Glass Lens, 2 mW, TO-18	\$24.59	Today

Single-Color IR LEDs (1650 - 4500 nm)

Item #	Center Wavelength ^a	Optical Power ^a	Spectral FWHM ^a	Viewing Half Angle ^b	Max Quasi-CW Forward Current ^c	Package
LED1600P	1650 nm	1.2 mW at 200 mA	150 nm	-	200 mA	TO-18R
LED1700P	1750 nm	1.2 mW at 200 mA (30 mW Pulsed at 1 A)	150 nm	-	200 mA	TO-18R
LED1800P	1850 nm	0.9 mW at 100 mA (20.0 mW Pulsed at 2 A)	150 nm	-	200 mA	TO-18R
LED1900P	1950 nm	1.0 mW at 200 mA (25.0 mW Pulsed at 1 A)	150 nm	-	200 mA	TO-18R
LED2050P	2050 nm	1.1 mW at 200 mA (28 mW Pulsed at 2 A)	200 nm	-	200 mA	TO-18R
LED2350P	2350 nm	0.8 mW at 200 mA (16.0 mW Pulsed at 1 A)	220 nm	-	200 mA	TO-18R
LED4300P	4200 nm	10 μ W at 200 mA (200 μ W Pulsed at 1 A)	900 nm	-	200 mA	TO-18R
LED4600P	4500 nm	6 μ W at 200 mA (120 μ W Pulsed at 1 A)	1100 nm	-	200 mA	TO-18R

- Typical values unless otherwise noted.
- This data is unavailable. For LEDs with a parabolic reflector, expect the viewing half angle to be only a few degrees.
- Specified for temperature of 25 °C.

Part Number	Description	Price	Availability
LED1600P	1650 nm LED with Parabolic Reflector, 1.2 mW Quasi-CW, TO-18R	\$86.94	Today
LED1700P	1750 nm LED with Parabolic Reflector, 1.2 mW Quasi-CW, 30 mW Pulsed, TO-18R	\$86.94	Today
LED1800P	1850 nm LED with Parabolic Reflector, 0.9 mW Quasi-CW, 20.0 mW Pulsed, TO-18R	\$127.12	Today
LED1900P	1950 nm LED with Parabolic Reflector, 1 mW Quasi-CW, 25.0 mW Pulsed, TO-18R	\$127.12	Today
LED2050P	2050 nm LED with Parabolic Reflector, 1.1 mW Quasi-CW, 28 mW Pulsed, TO-18R	\$127.12	Today
LED2350P	2350 nm LED with Parabolic Reflector, 0.8 mW Quasi-CW, 16.0 mW Pulsed, TO-18R	\$127.12	Today
LED4300P	4200 nm LED with Parabolic Reflector, 10 μ W Quasi-CW, 200 μ W Pulsed, TO-18R	\$73.02	Today
LED4600P	4600 nm LED with Parabolic Reflector, 6 μ W Quasi-CW, 120 μ W Pulsed, TO-18R	\$169.15	Today

Multi-Color LEDs

Item #	Center Wavelength ^a	Optical Power ^a	Spectral FWHM ^a	Viewing Half Angle ^a	Max DC Forward Current ^b	Package
LEDGR	625 nm and 572 nm	0.19 mW and 0.09 mW (at 20 mA)	40 nm and 30 nm	15°	30 mA	T-1 3/4 ^c
LEDRY	617 nm and 588 nm	0.19 mW and 0.09 mW (at 20 mA)	45 nm and 35 nm	30°	30 mA	T-1 3/4 ^c
LEDRGBE (R, G, and B)	627.5 nm, 525 nm, and 467.5 nm	5.8 mW, 3.1 mW, and 6.2 mW	20 nm, 36 nm, and 15 nm	25°	50 mA	T-1 3/4 ^c

- Typical values unless otherwise noted.
- Specified for temperature of 25 °C.
- This LED is not compatible with the 8060-2 LED socket due to the extra pins required for multi-color operation.

Part Number	Description	Price	Availability
LEDGR	625/572 nm Dual-Color LED, Qty. of 5	\$14.08	Today
LEDRY	617/588 nm Dual-Color LED, Qty. of 5	\$13.24	Today
LEDRGBE	627.5/525/467.5 nm Tri-Color LED, Qty. of 5	\$31.26	Today

White Light LEDs


Item #	Wavelength Range ^a	Optical Power ^{a,b}	Spectral FWHM ^a	Viewing Half Angle ^a	Max DC Forward Current ^c	Package
LEDWE-15 ^d	430 - 660 nm	13.0 mW	N/A	7.5°	30 mA	T-1 3/4
LEDW7E	430 - 660 nm	15.0 mW	N/A	7.5°	30 mA	T-1 3/4
LEDW25E	430 - 660 nm	15.0 mW	N/A	25°	30 mA	T-1 3/4

- Typical values, unless noted otherwise.
- At 20 mA unless otherwise noted.
- Specified at a temperature of 25 °C.
- Does not fit the LEDMT1E.


Part Number	Description	Price	Availability
LEDWE-15	Epoxy-Encased White Light LED, 13.0 mW, 7.5° Half Viewing Angle, Qty. of 5	\$9.66	Today
LEDW7E	Epoxy-Encased White Light LED, 15.0 mW, 7.5° Half Viewing Angle, Qty. of 5	\$7.75	Today
LEDW25E	Epoxy-Encased White Light LED, 15.0 mW, 25° Half Viewing Angle, Qty. of 5	\$8.04	Today

USB-Powered LED Mounts

- ▶ USB-Powered Mount for LEDs in T-1 3/4 Packages
- ▶ Options with Built-In 51 Ω or 62 Ω Current-Limiting Resistor for Different Electrical Requirements
- ▶ External SM05 (0.535"-40) Mounting Thread
- ▶ Includes Micro-B USB to USB Type-A Cable for Power LED Module



Click for Details
LEDMT1E
Mechanical
Schematic



Click to Enlarge
LEDMT1E Electrical
Schematic

These USB-Powered LED Mounts provide both power and a mounting socket for our unmounted LEDs in T-1 3/4 packages within a single compact housing. Because of the varied electrical requirements, we offer the LED mounts with either a 51 Ω or 62 Ω current-limiting resistor. The module is powered via the micro-B USB port on the back of the housing which can be connected to a USB power source or PC via the included USB to micro-B USB cable. The housing exterior features external SM05 (0.535"-40) threading which can be used to integrate these mounts with a cage system or SM05-threaded component.

When mounting an LED, use the engraving on the housing to determine the appropriate length to cut the leads (see drawing to the right). Insert the LED with the anode lead going into the socket indicated by a (+) sign and the cathode into the socket indicated by a (-) sign. Use light force to mount the LED as excessive force may bend the electrode leads.

These powered mounts offer a fixed resistance and input voltage; choosing the appropriate mount for your LED will minimize damage to the LED. In general, a mount with a lower resistance value will increase the forward current available to the LED and proportionally increase the optical output power. However, the forward current must not exceed the maximum current of LED as this can cause permanent damage to the LED. The minimum mount resistance (R) recommended to use a desired LED is given by the following equation:

$$R = \frac{V_{I,Source} - V_{F,Typ}}{I_{F,Max}}$$

where the input voltage of the mount ($V_{I,Source}$) is 5 V and the typical forward voltage ($V_{F,Typ}$) and maximum forward current ($I_{F,Max}$) are properties of each LED. Please consult the specifications of your LED for these values.

Item #	LEDMT1E	LEDMT1F
Input Voltage (V_I)	5 V	
Resistance	51 Ω	62 Ω
Compatible LED Package	T-1 3/4 ^a	
Mounting Thread	External SM05 (0.535"-40)	
Outer Dimensions	Ø0.70" x 0.83"	
Compatible LEDs ^b	LED370E LED405E LED465E LED528EHP LED780E LED870E LED940E LED1050E LED1070E LED1200E LED1300E LED1450E LED1550E	LED525E LED591E LED630E LED631E LEDW25E LEDW7E

- LEDs with three pins and the LEDWE-15 are not compatible with the powered LED mounts.
- LEDs compatible with a lower resistance mount will typically work with a higher resistance mount but with decreased output power.

Part Number	Description	Price	Availability
LEDMT1E	Customer Inspired! USB-Powered LED Mount, 51 Ω Resistor	\$46.35	5-8 Days
LEDMT1F	Customer Inspired! USB-Powered LED Mount, 62 Ω Resistor	\$46.35	5-8 Days

LED Mounts

The LEDMF LED Mount is designed to hold any of Thorlabs' TO-18R packages directly or our T-1 3/4 or TO-18 packages using one of the included adapter rings (Ø4.7 mm adapter for TO-18 or Ø5 mm adapter for T-1 3/4). The LED is secured in the mount with a top-located cap screw with a 5/64" (2 mm) hex. The L-shaped mount has a counterbored through hole suitable for an 8-32 (M4) cap screw so that the LEDMF can be attached to a Ø1/2" Post.

The S05LEDM and S1LEDM LED Mounts are SM05 (0.535"-40) and SM1 (1.035"-40) threaded, respectively. They are designed to hold any of Thorlabs' TO-18, TO-39, TO-46, or T-1 3/4 packages using the included adapter rings. The external threading on these mounts allows them to be used in a wide variety of SM05- or SM1-compatible optomechanics.

To aid in threading the retaining ring into the mount or in threading the mount into a mating component, we recommend using our selection of spanner wrenches. The SPW801 Adjustable Spanner Wrench can be used to thread LED retaining rings into the mount and the mount into a mating component. Alternatively, the table to the right also lists the compatible fixed spanner wrench for each mount.


LED Mount Compatibility				
Item #	LED Package	External Mounting Threads	Compatible Spanner Wrenches	
			Mount	LED Retaining Ring
LEDMF	TO-18, TO-18R, and T-1 3/4 ^a	Smooth Bore	N/A	N/A
S05LEDM	TO-18, TO-39, TO-46, and T-1 3/4 ^a	SM05 (0.535"-40)	SPW603 SPW801	SPW301 SPW801
S1LEDM		SM1 (1.035"-40)	SPW909 SPW801	

- The LEDRGBE, LEDGR, and LEDRY are not compatible with the LEDMF, S05LEDM, and S1LEDM, as the lead spacing prevents them from being mounted.

Part Number	Description	Price	Availability
LEDMF	Ø1/2" Post-Mountable LED Mount for TO-18, TO-18R, and T-1 3/4 LEDs	\$28.11	Today
S05LEDM	Customer Inspired! SM05-Threaded Mount for TO-18, TO-39, TO-46, or T-1 3/4 LEDs	\$33.62	Today
S1LEDM	SM1-Threaded Mount for TO-18, TO-39, TO-46, or T-1 3/4 LEDs	\$29.16	Today

LED Socket

Thorlabs offers a light-emitting diode (LED) socket that is compatible with LEDs that have two leads. This socket fits LED leads that are Ø0.016" (Ø0.41 mm) and ≤0.22" (5.6 mm) long. The socket has gold-plated beryllium copper contacts and meets RoHS compliance. Color varies by lot and may be white, off white, black, or tan.

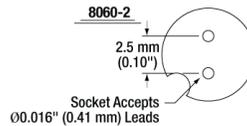

Specifications	
Conductor	Beryllium Copper (BeCu)
Insulator	PTFE
Compatible Lead Diameters	0.016" (0.41 mm)
Compatible Lead Lengths	≤0.22" (5.6 mm)
Outer Diameter	5.8 mm (0.23")
Substrate Thickness	6.9 mm (0.27")

Part Number	Description	Price	Availability
8060-2	Light-Emitting Diode Socket for LEDs, 2 Pin	\$10.19	Today

