


XT95 Series of Vertical Leveling Feet

- 30 mm Vertical Adjustment Range
- Heavy-Duty Stainless Steel Swivel Pads
- Clear Aperture Ø2.83" (Ø71.9 mm) (XT95P5 and XT95P6)
- Includes Mounting Hardware and Hex Key





XT95P5
Rail Sold
Separately

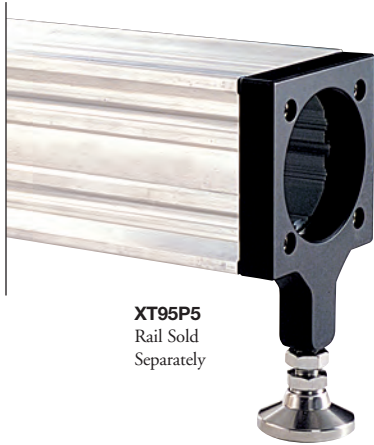

XT95P6
Rail Sold
Separately

NEW
products

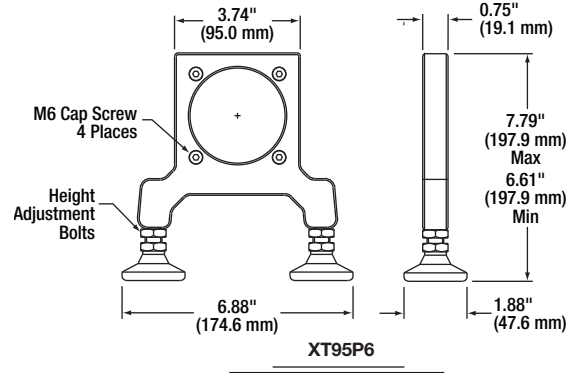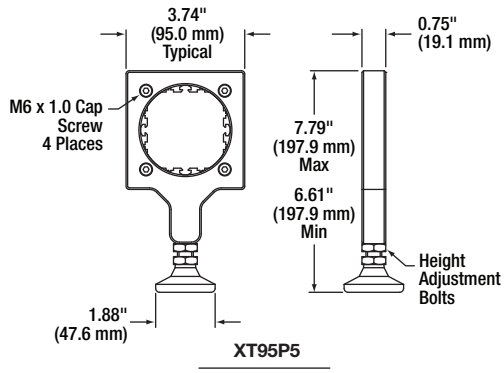

The XT95P5 and XT95P6 Vertical Leveling Feet have four countersunk M6 through holes. These holes are positioned to allow the leveling feet to be attached to the ends of XT95 rails using the included 5 mm hex key and four M6 x 1.0 cap screws. In order to allow access to the interior of the optical rail, each leveling foot has a hole with a Ø2.83" (Ø71.9 mm) clear aperture.

The XT95P9 and XT95P10 Midspan Leveling Feet attach to an XT95 rail using the included channel nuts, M6 x 1.0 cap screws, and 5 mm hex key. The leveling feet can be positioned anywhere along the length of the rail. In addition, any combination of two XT95P9 and/or XT95P10 feet can be bolted together using the 1/4" (6.4 mm) through hole and a 1/4"-20 tapped hole located on each foot. Two rails can be conveniently aligned by bolting together two midspan supports that are located at the end of their respective rails.



XT95P10

All of the leveling feet can be adjusted over a vertical range of 30 mm (1.18"). Once the correct height is set, a locking nut can be tightened to prevent further adjustment. The durable stainless steel swivel pads ensure that the leveling feet maintain stable contact with the surface they are resting on, even if the surface is tilted.



XT95P9
Rail Sold Separately

ITEM#	\$	£	€	RMB	DESCRIPTION
XT95P5	\$ 74.90	£ 52.00	€ 66,50	¥ 632.50	XT95 Vertical Leveling Foot
XT95P6	\$ 93.20	£ 64.70	€ 82,80	¥ 787.00	XT95 Dual Vertical Leveling Feet
XT95P9	\$ 71.40	£ 49.50	€ 63,40	¥ 603.00	Midspan Vertical Leveling Foot
XT95P10	\$ 107.10	£ 74.30	€ 95,10	¥ 904.40	Midspan Dual Vertical Leveling Feet

NEW
NEW