

10 mm Stainless Steel Translation Stage

XP10X

Date: 10/31/2025
S/N: 00007
Range Tested: 10 mm

Production Order Number: TP03840102
Assembled by: JSK
Technician: JSK

Summary of Test Data


X-Pitch Deviation ^a (μrad)	
Min	-60.51
Max	-0.85
Range	59.66

a. 10 mm Test Range

X-Yaw Deviation ^a (μrad)	
Min	0.40
Max	74.34
Range	73.95

a. 10 mm Test Range

X-Pitch Deviation

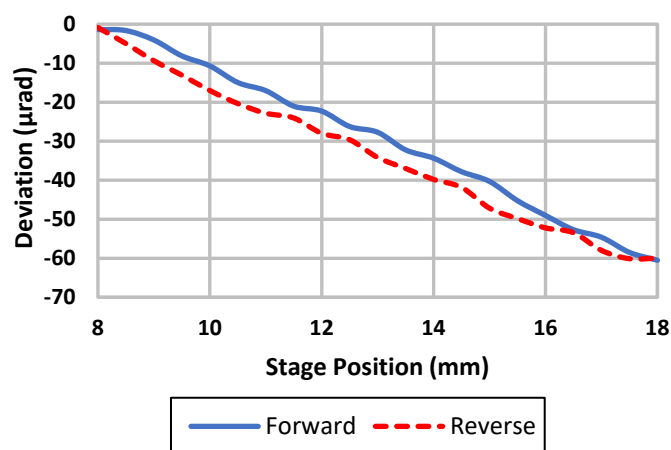

X-Yaw Deviation

